

# ***DUROMAX***

## **Bottom Section Quick Release Installation Instructions**


### **Step One: Bottom Quick Release Brackets**

Locate center line of trailer. Install bulkhead support brackets (part# 2015) on the front wall along floor 35" out from the center line using two each hex head screws included with kit.



### **Step Two: Placement of Bottom Section**

Place the lower bulkhead section into the 2 bulkhead support brackets and position bulkhead against the front wall of the trailer.

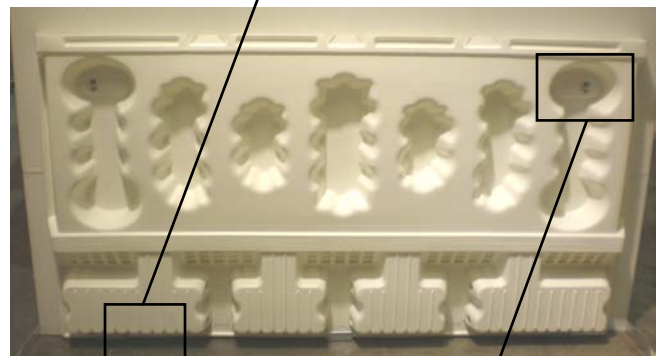

### **Step Three: Installation of Quick Release Latches**

Locate the two cut-outs on the bottom section. Place the latch in the cut-out and secure with the provided self tapping sheet metal screws into the front wall unit side post. When installed, turn the latches to secure the bottom section against the front wall of the trailer.



**ITW Insulated Products**  
**1-800-233-6180**  
[www.itwip.com](http://www.itwip.com)